

# University of Winnipeg Device Training

PSD: Solution Training Specialist Team



# Summary

---





# Document Feeder & Exposure Glass

---

**Face up, 200 originals**





# Paper Trays



To adjust





# FIRST TIME REGISTRATION

Scan your university ID card on the printer.





# STEPS

---

After you swipe `Ai9M833 470.48 l404r2 74.335 45 card35 ,s.391e8 45 c(8r )`





 
---

# Logging in at a Terminal

# Signing into Terminal

---

When coming up to the Print Terminal, you will be welcomed with the Nuance screen.

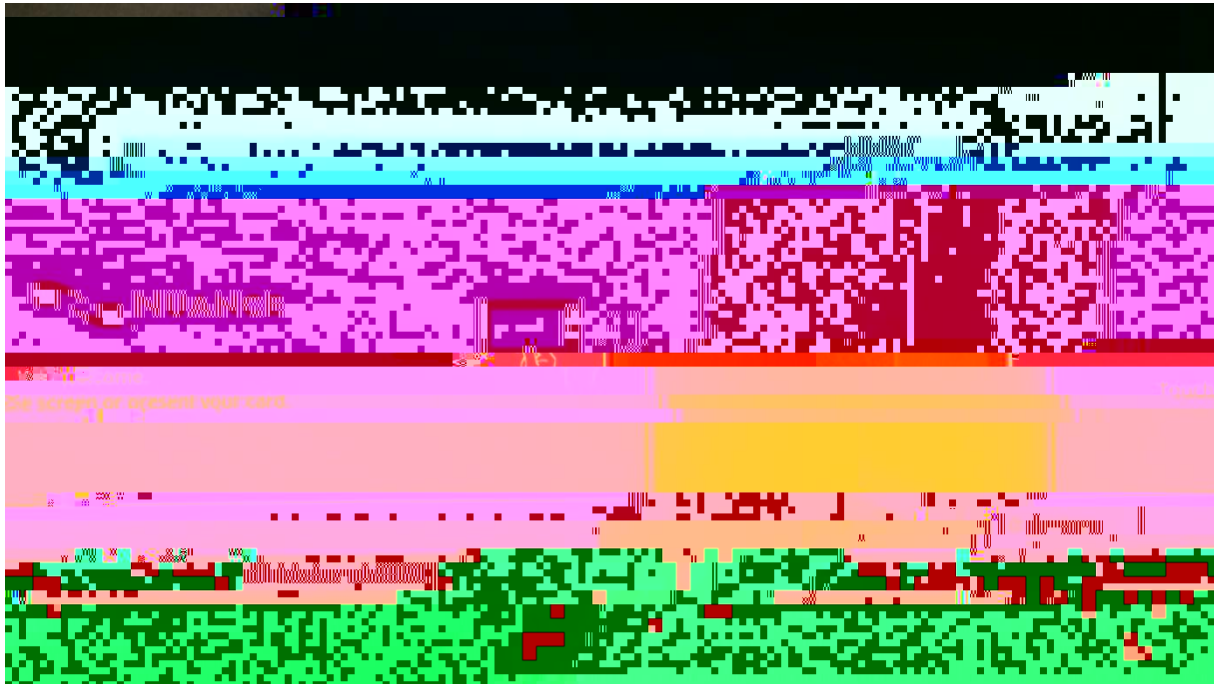

# Signing into Terminal

---

There are two ways you can sign into the Print Terminal:

1. Swipe your card, the screen will let you know once the card has been recognized.



2. Touch the screen to be prompted to type in your User ID and password.





# Printing from the Print Terminal

 
---

# Copying from Print Terminal



Once you have logged in you can also select the Copier mode.

Once you have finished copying the panel will give you your Total Impressions and the cost.

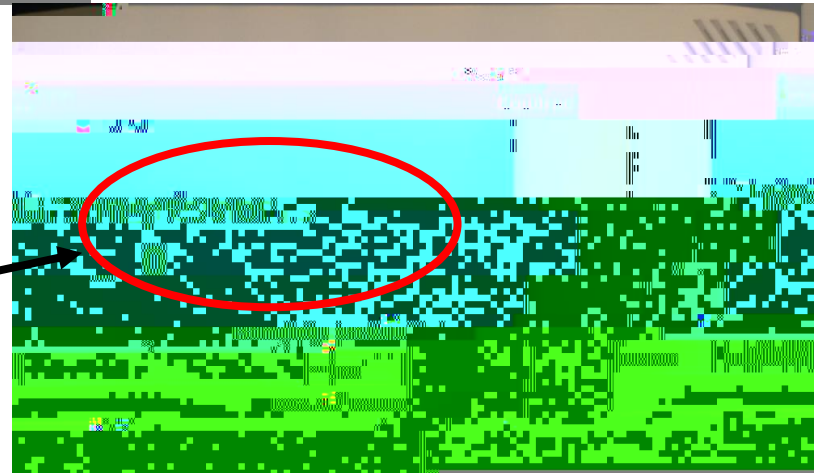






# Scanning

You can scan without having to login.

On the home screen select the "Scan" button

   Select the "Enable Scan" option

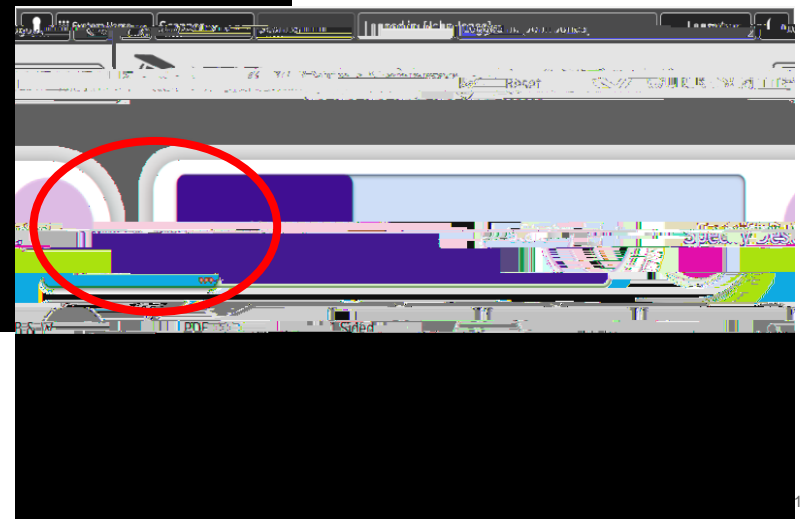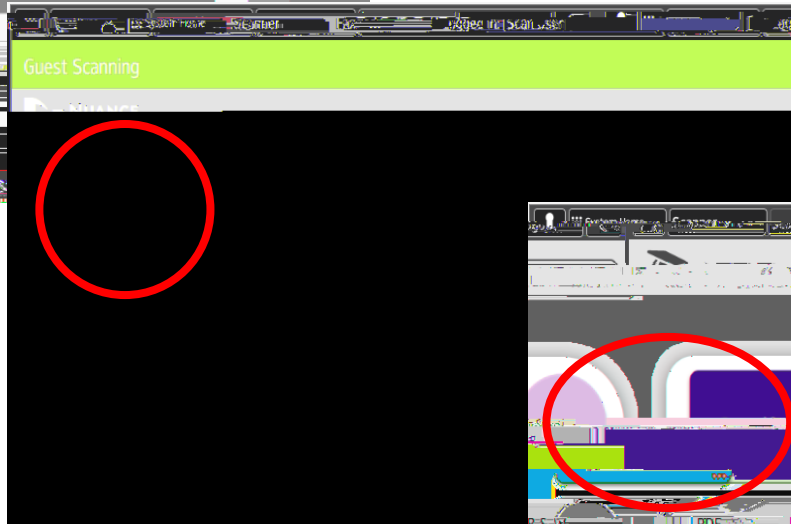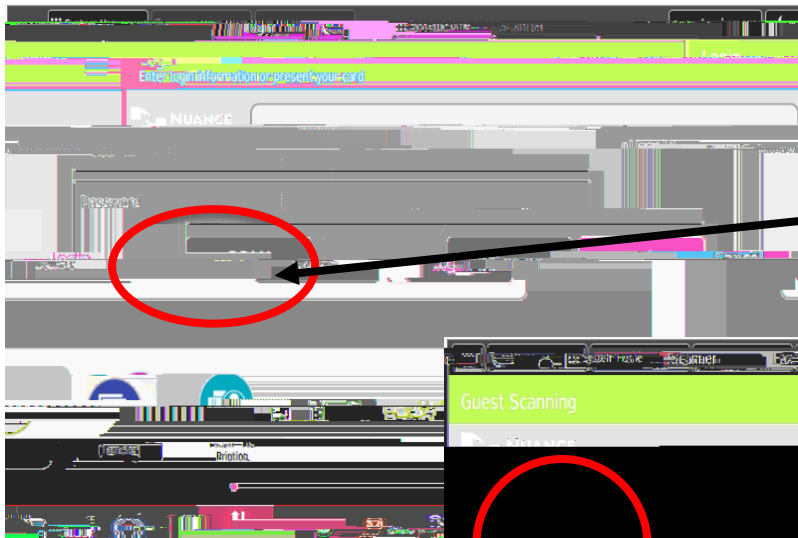





---

# Equitrac Options

 


# OPTIONS

---

Once logged in, you will have the following Options to chose from:

1. Follow -You Printing
2. Scan-to-Me
3. Copy
4. Scan
5. Fax





---

Follow You Printing





# 1) FOLLOW-YOU PRINTING







---

 
# Scanning





## 2) Scanning

Place your original in the feeder and press “Scan” button to initiate scanning. Additionally, you may select “Other” for additional scan settings.

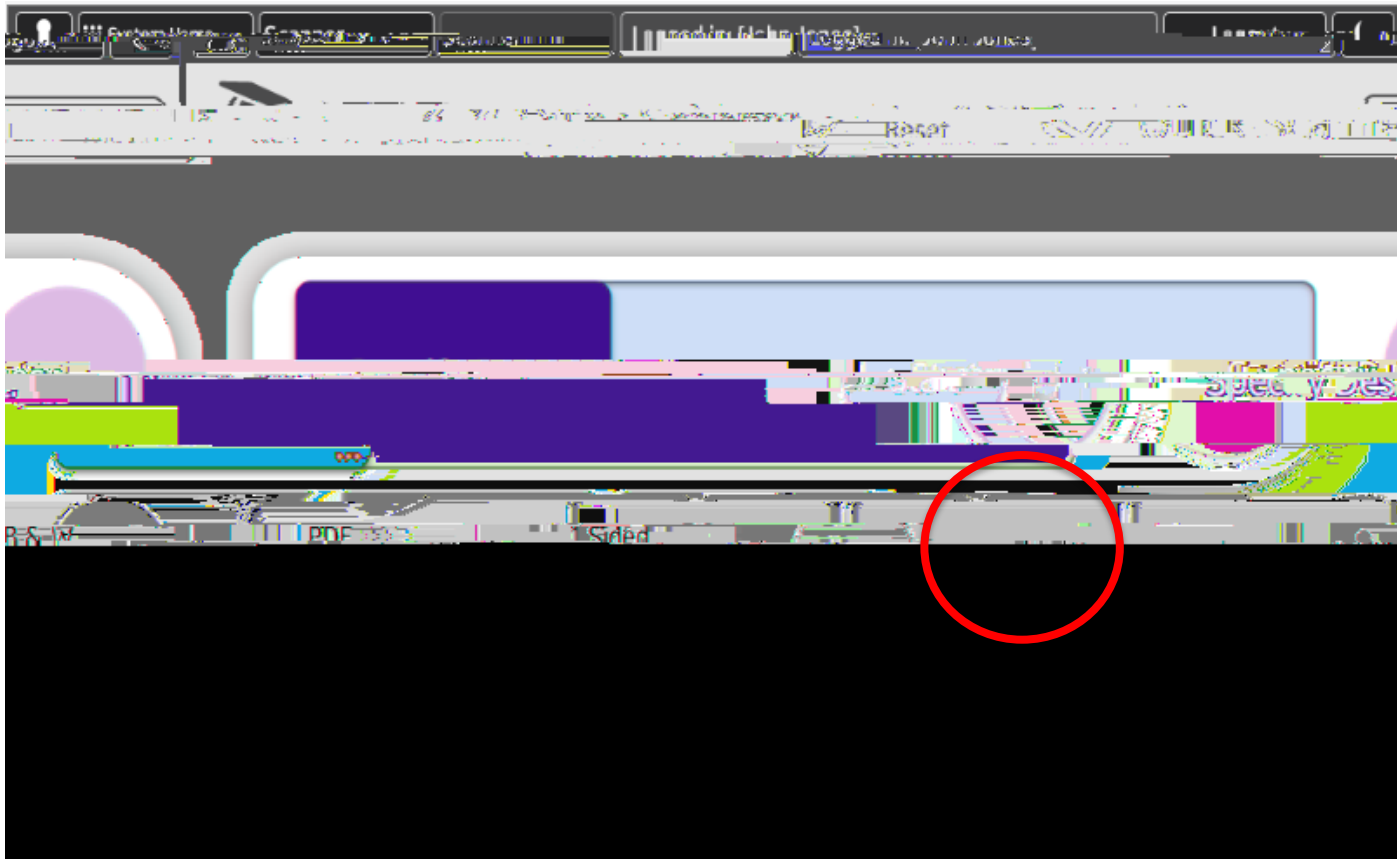



## 2) Scanning

---





 
# Advanced Scan

To choose between **Black & White** or






# Advanced Scanning - OCR

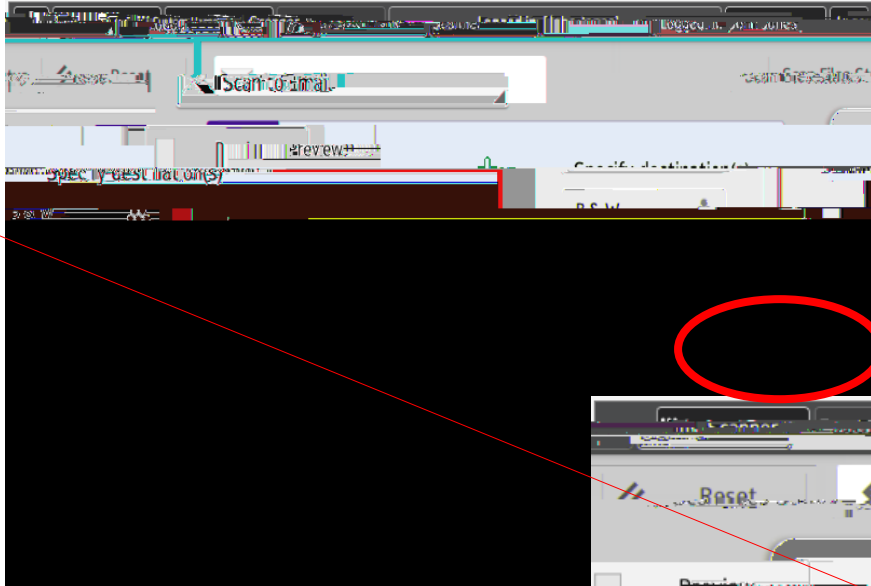

 To find the OCR option, select the Send Setting button.



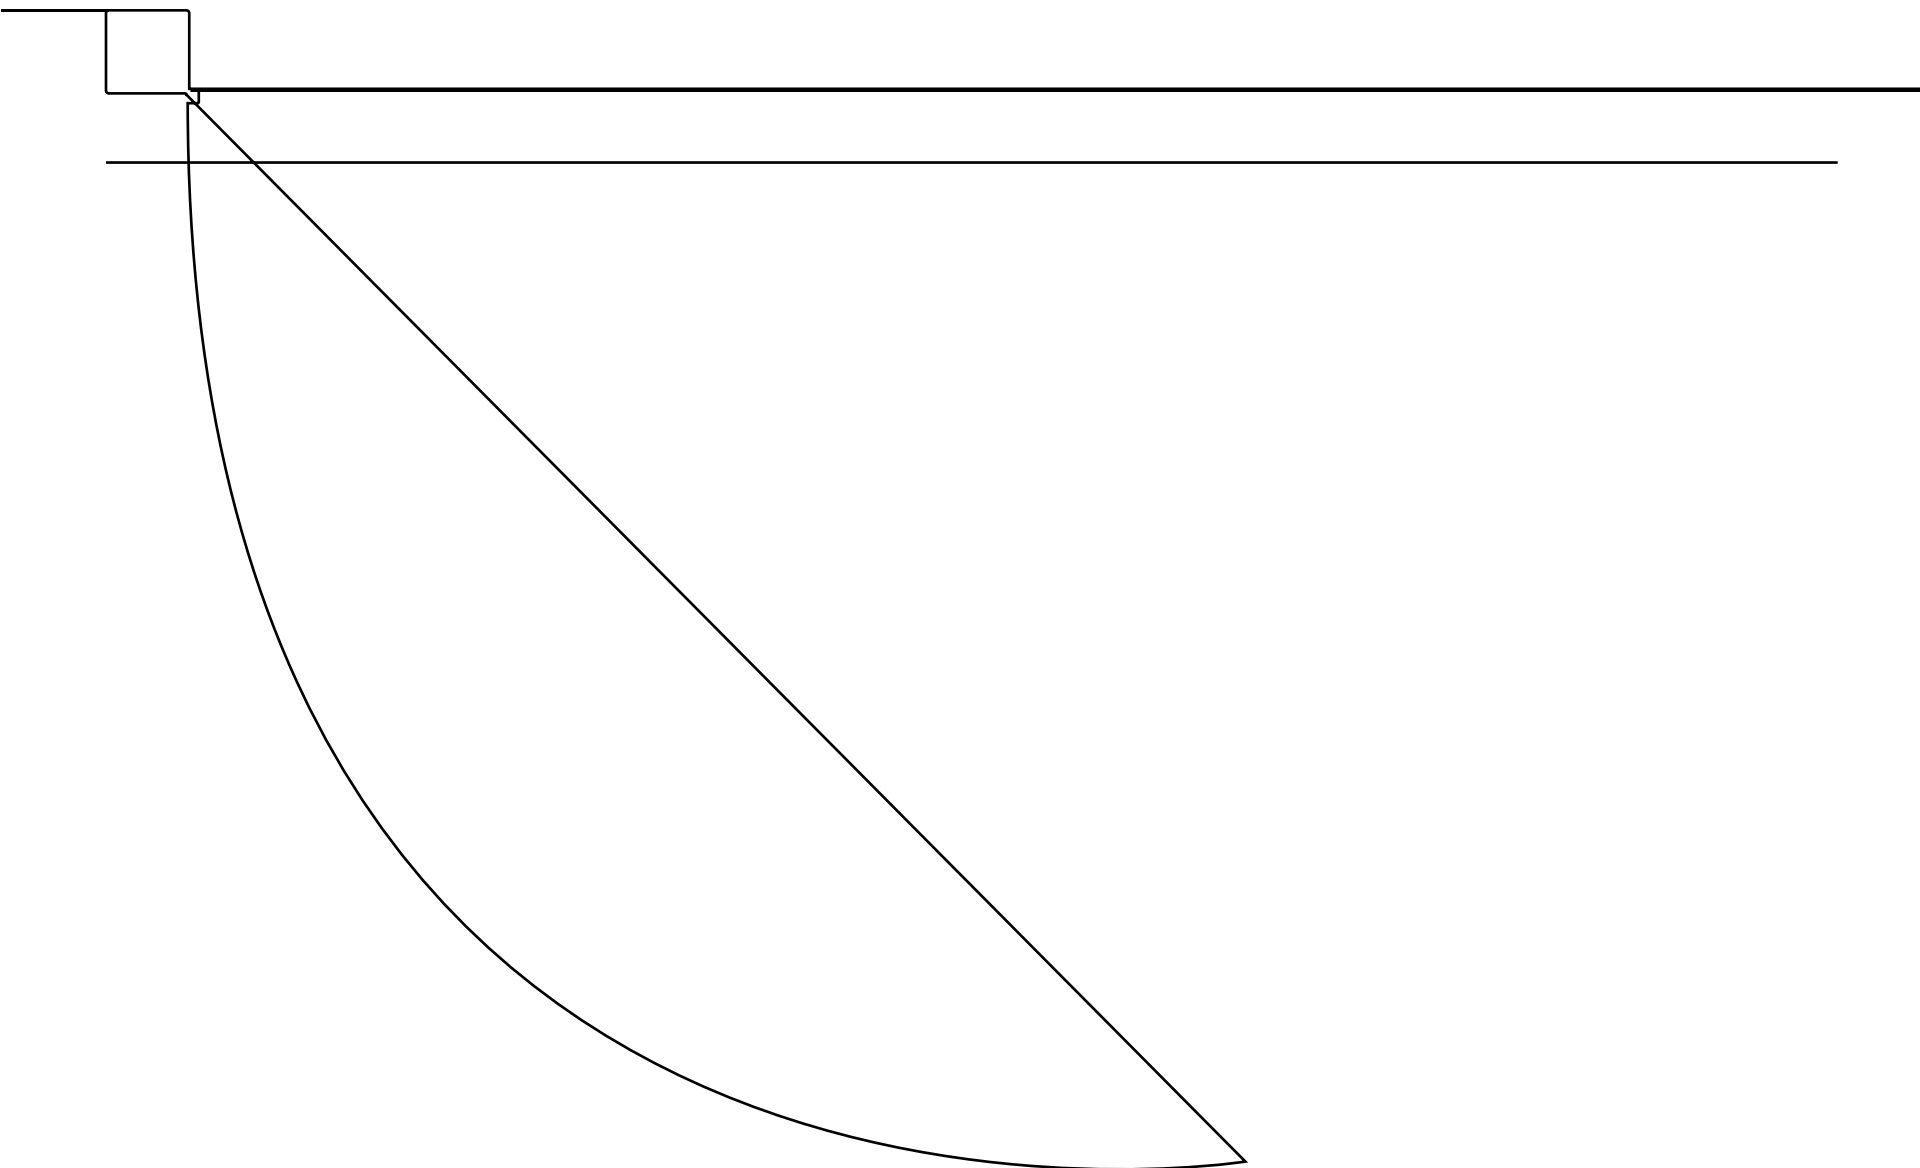




# Advanced Scanning - OCR

---

 Swipe up to find

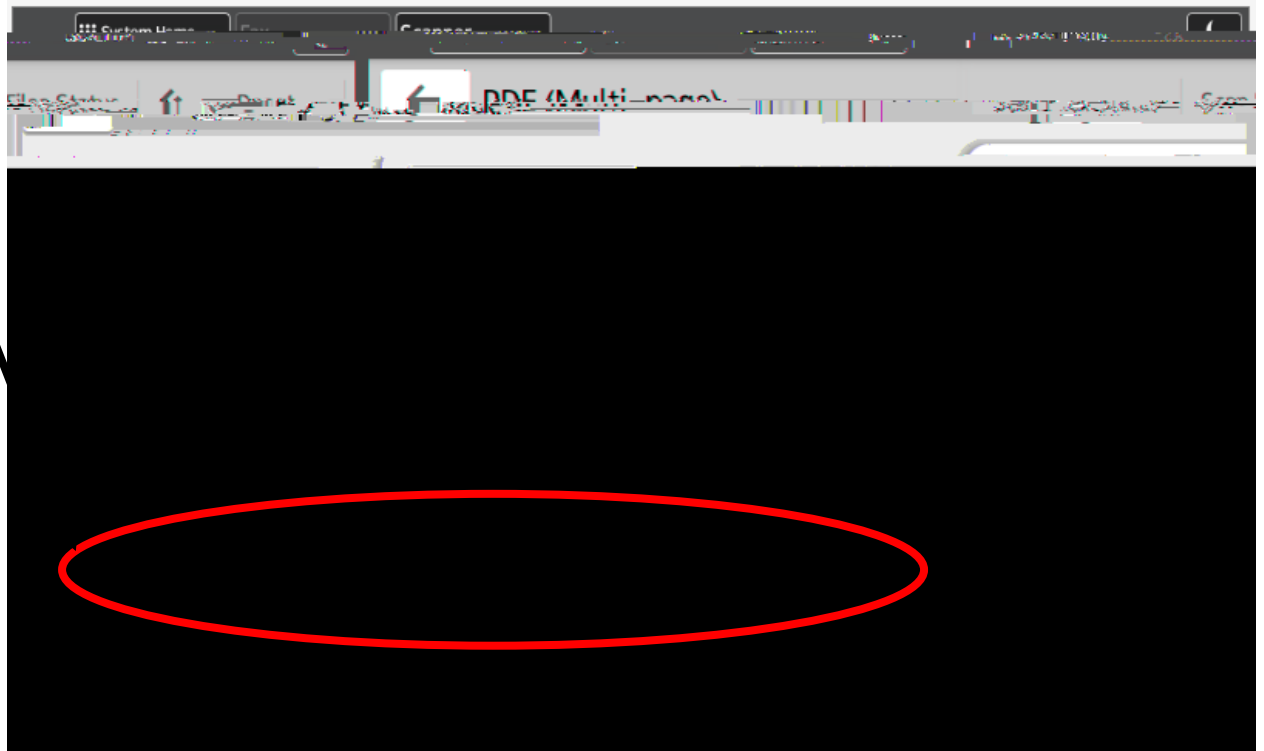






Copy Mode

# Copy Mode

 ---


To copy, select “Enable Copier”





# Copy

To choose between **Black & White** or **Color** copying

 Select quantity needed

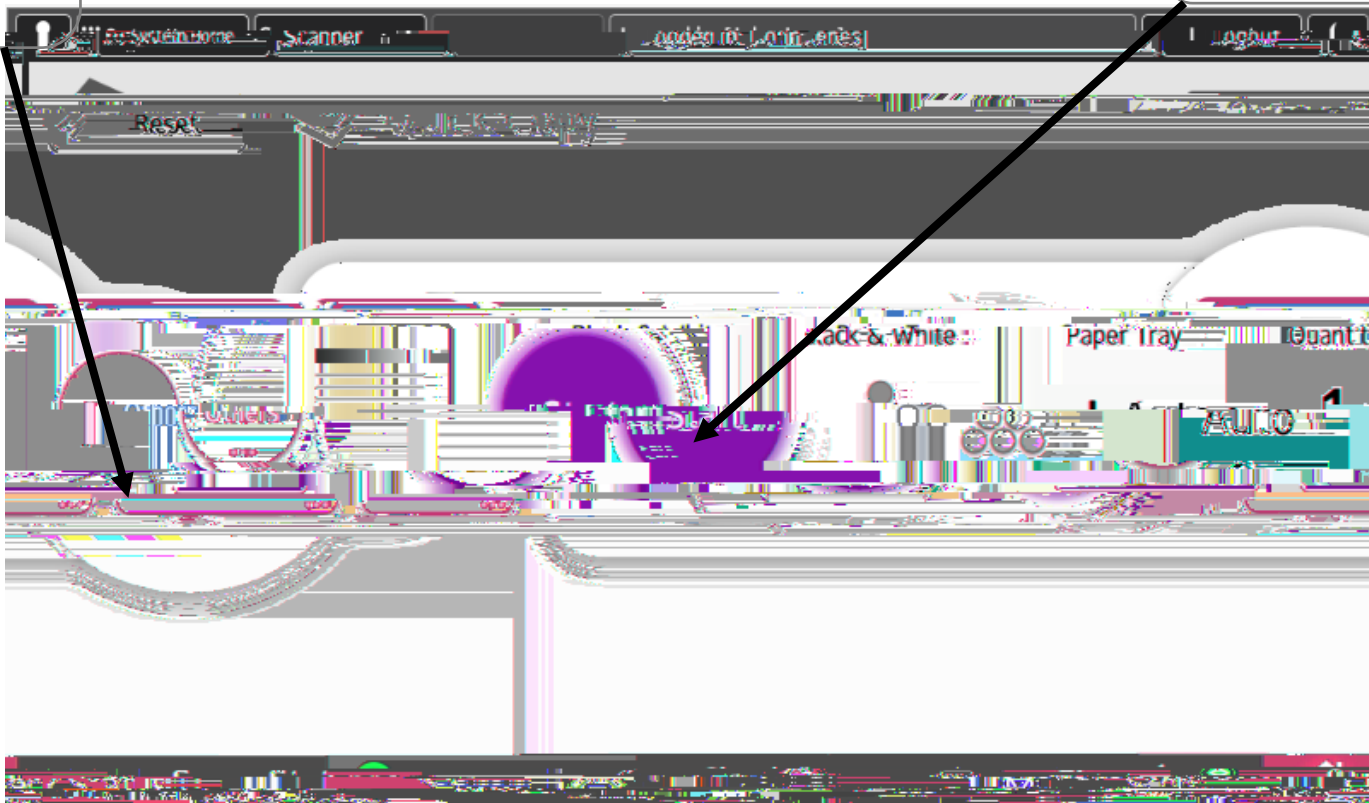


# Copy – Other Settings

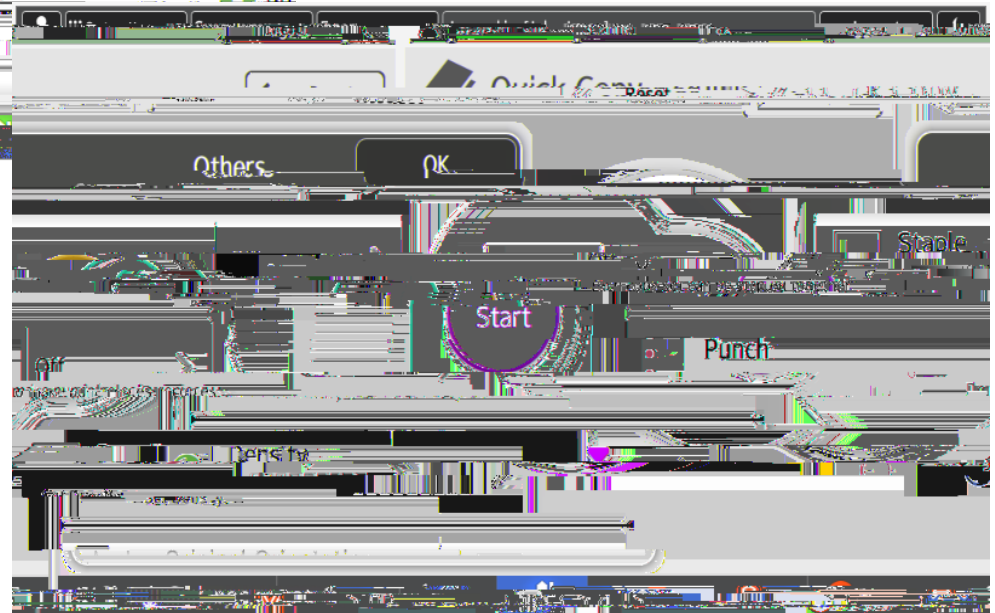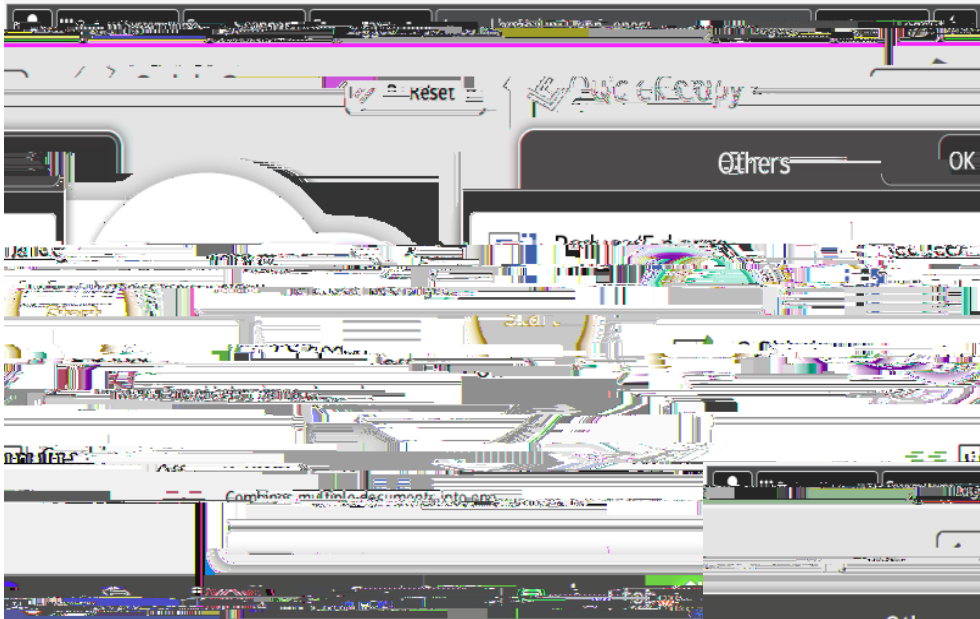  



# Advanced Copy

 ---

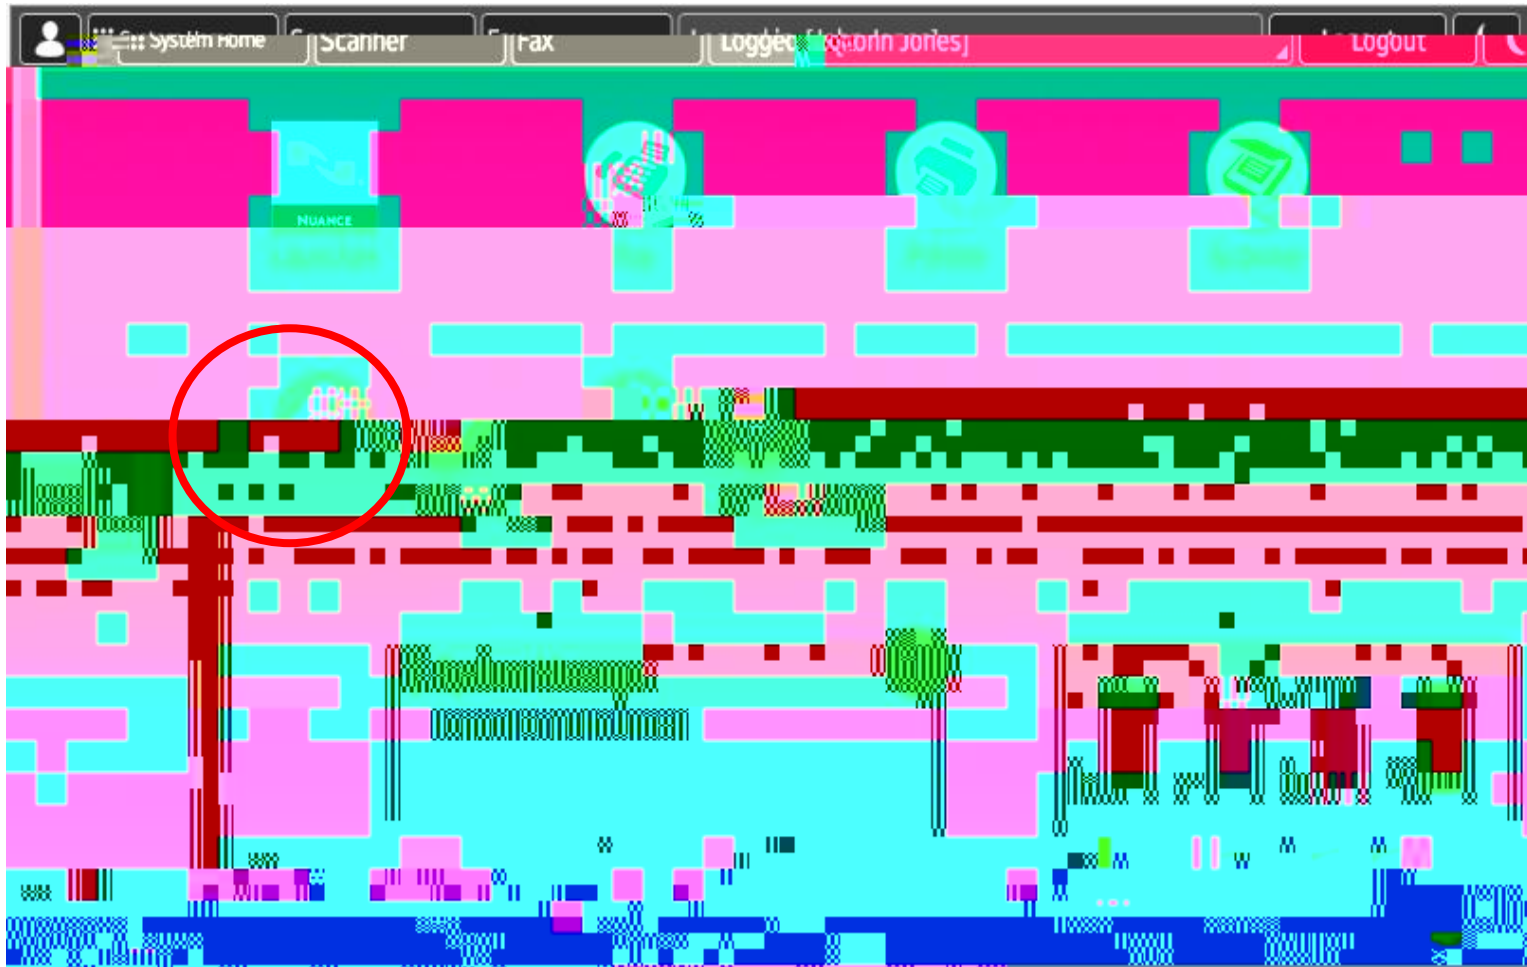

# Advanced Copy

 
To choose between **Black & White** or **Color** coping



A quick preview of option selected

To choose a duplex option

# Advanced Copy

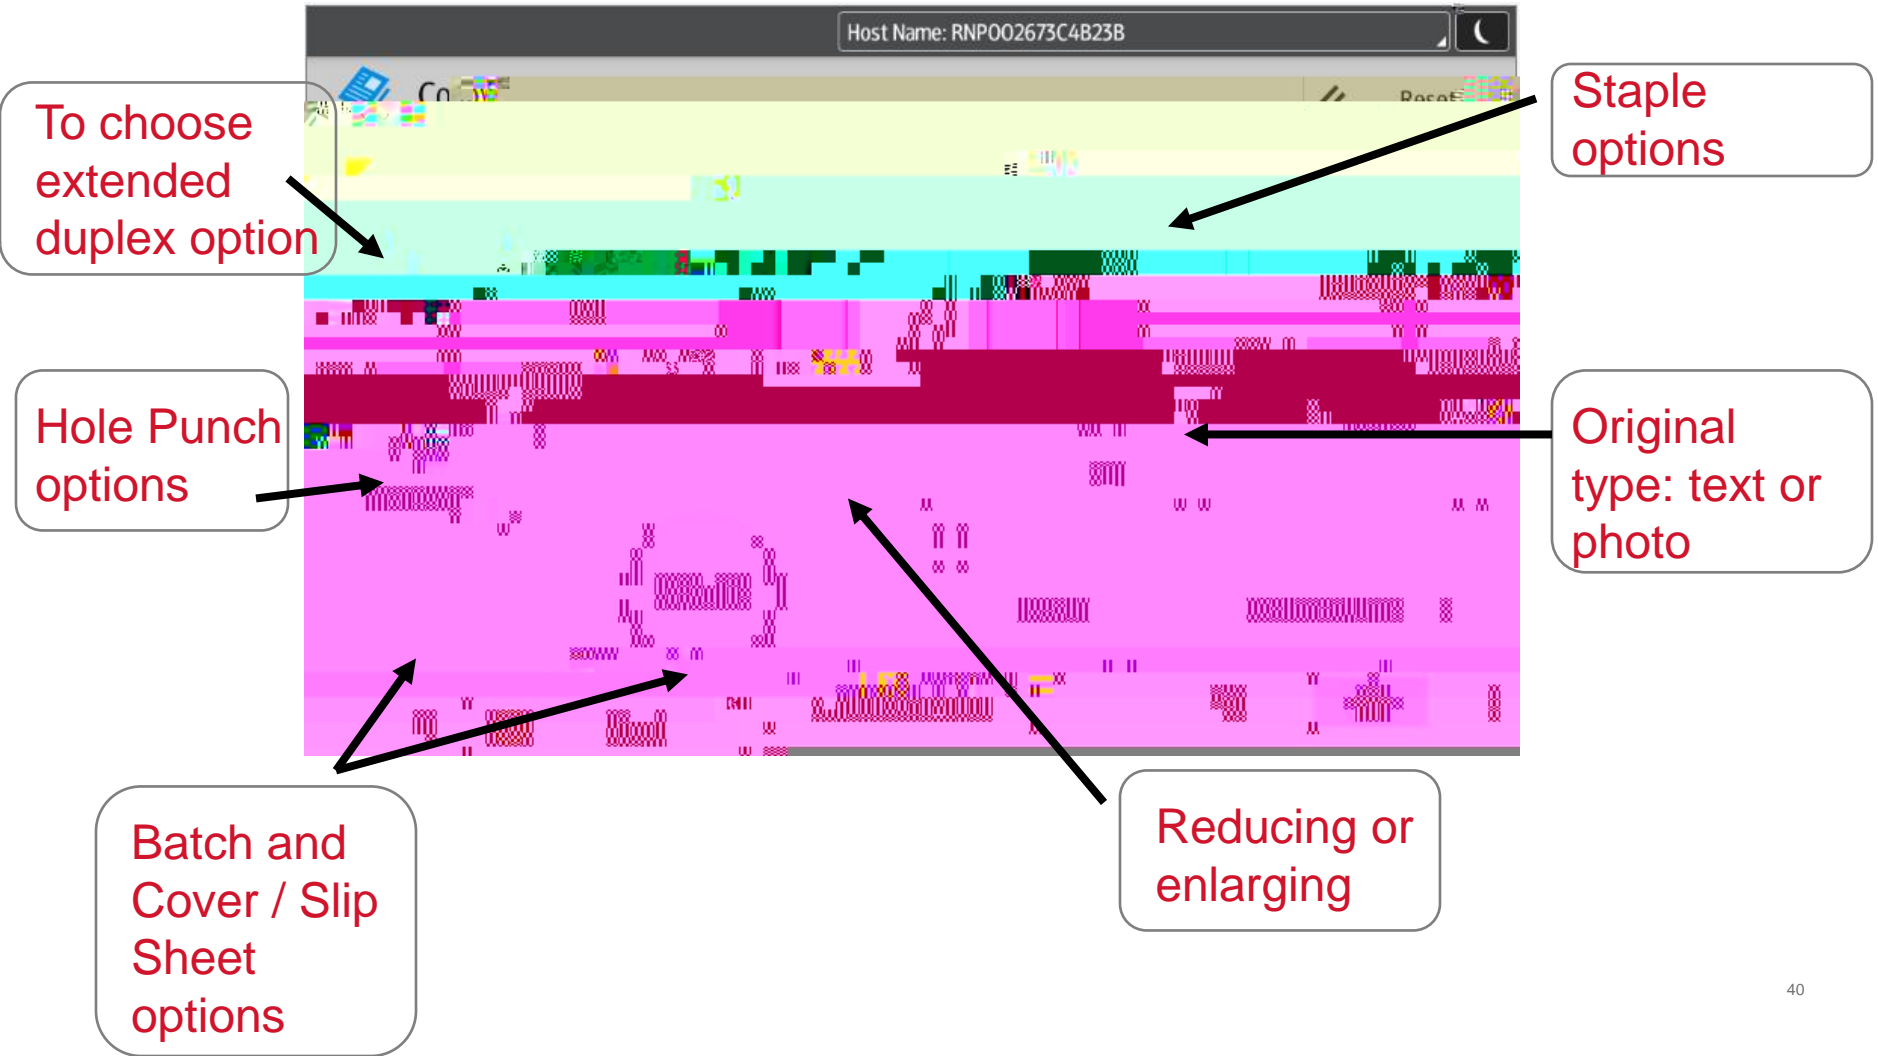






# Fax Mode

---


 
# Fax Features

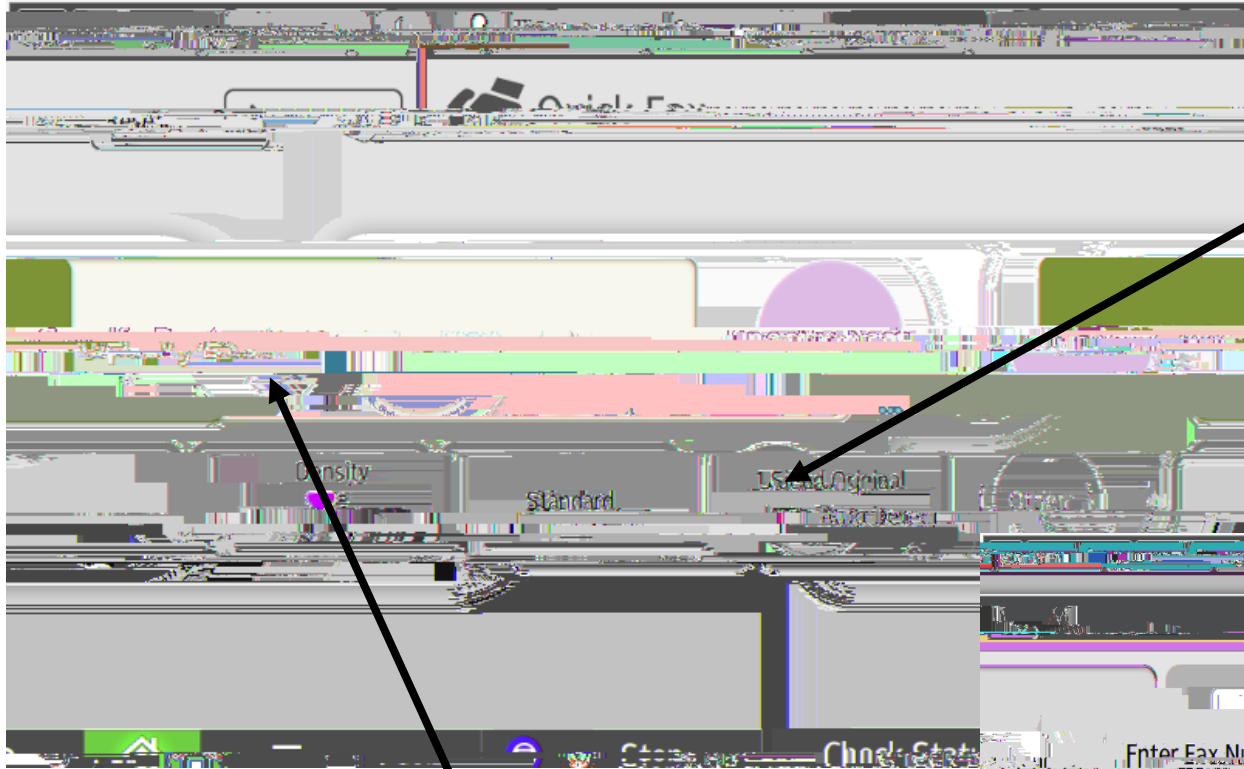

Select fax features; 1 sided, density

Select "Specify Dest" to enter the fax number you would like to send to








---

# Clearing Misfeeds and Maintenance



   
# Clearing Misfeeds- Logged In

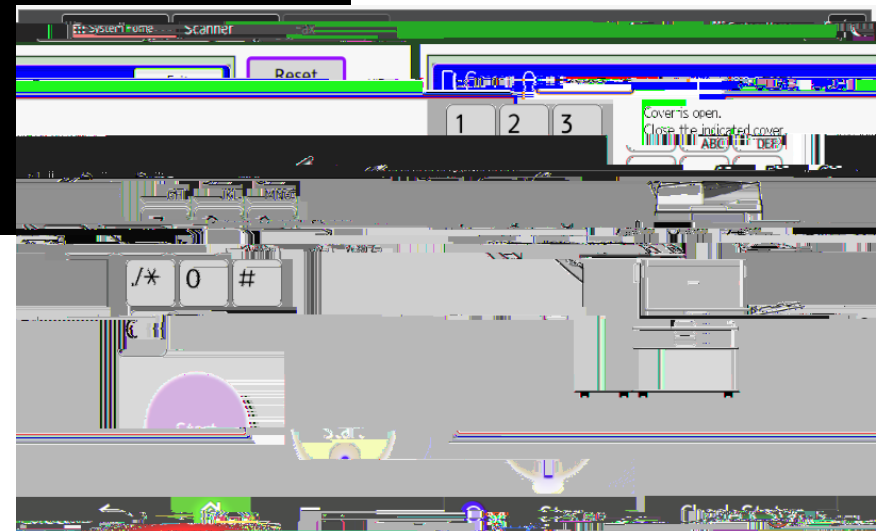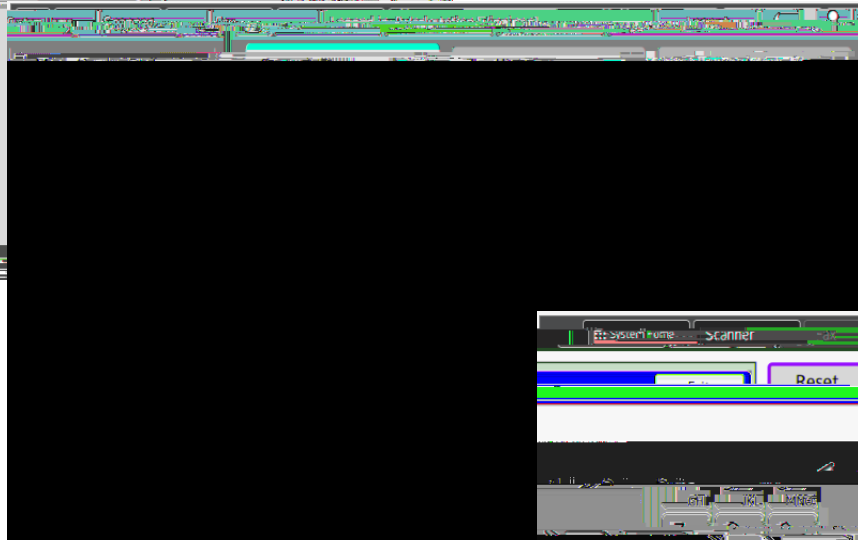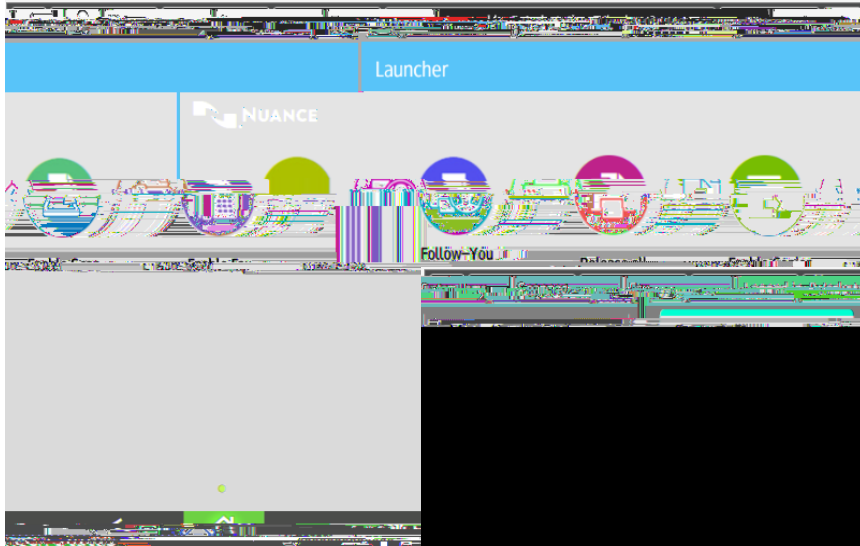



# Misfeeds

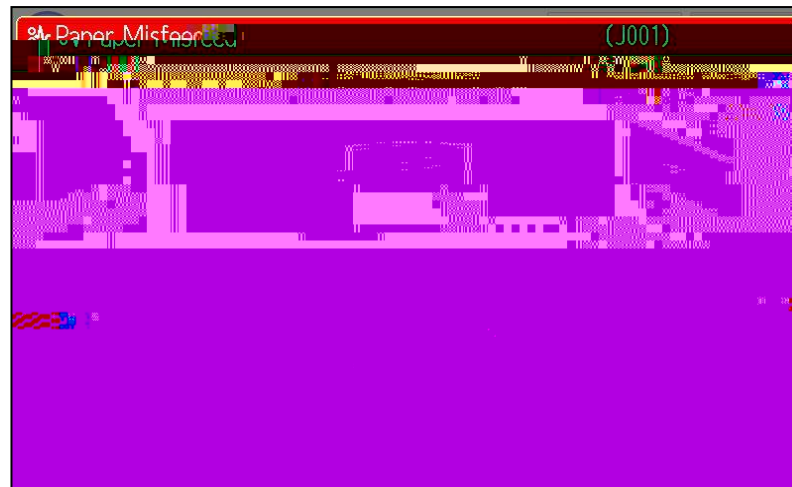 


Follow



# Misfeeds



 Section Y

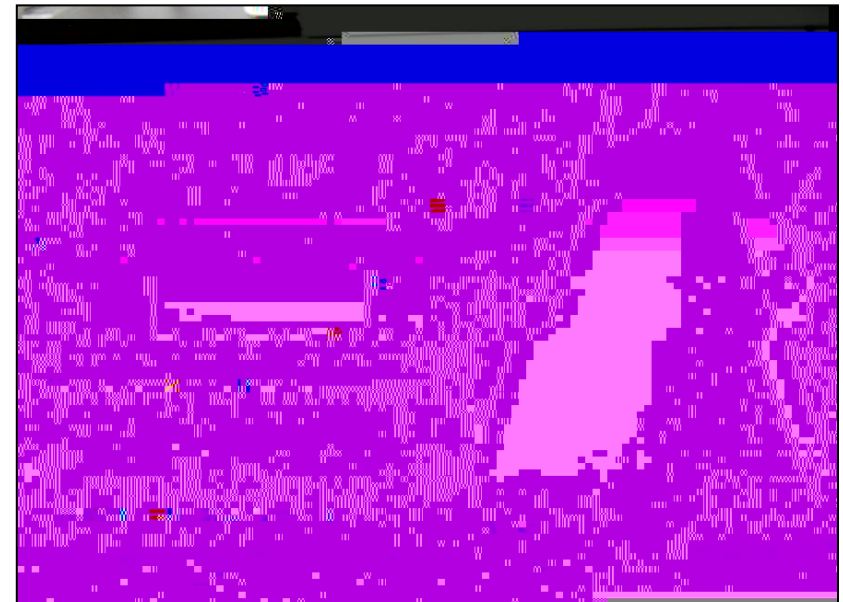

Sections B and C


Always remove the misfed paper in the same direction as the feed rollers.  
Do not pull sideways as the paper will tear and the rollers will wear.








# Misfeeds

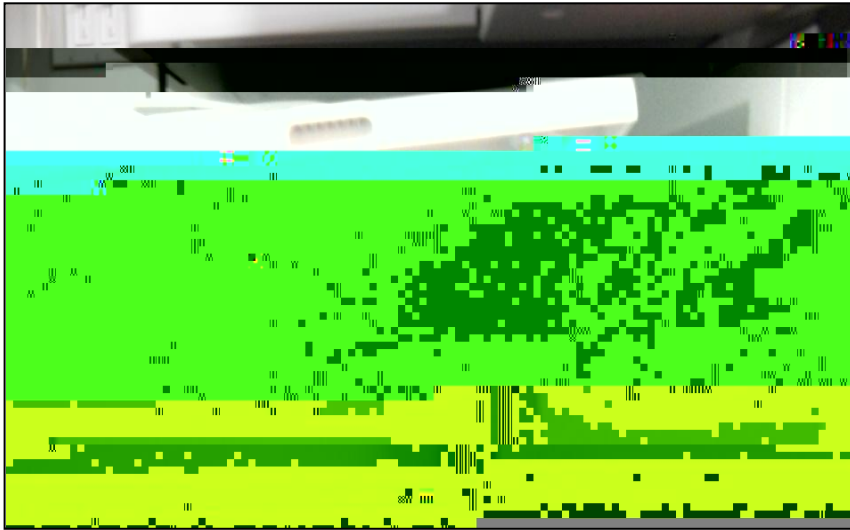 

Section D




 Section Z (Duplex unit), located inside the right panel

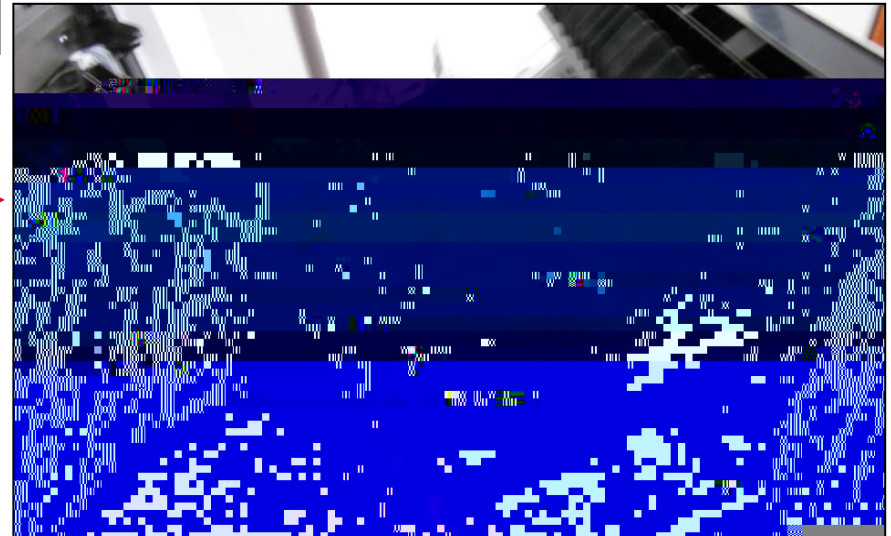




# Misfeeds - Finisher

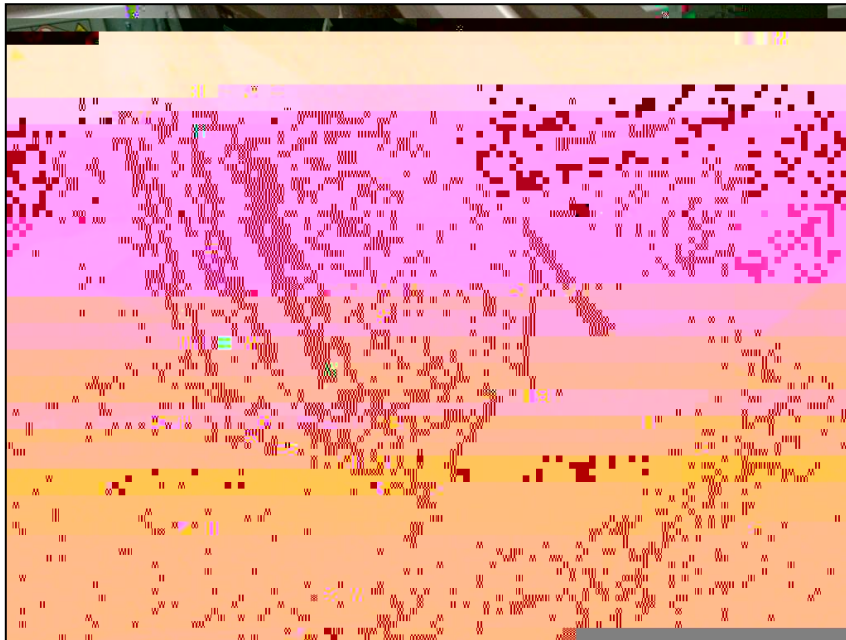 

Section R  
(1000-sheet finisher)

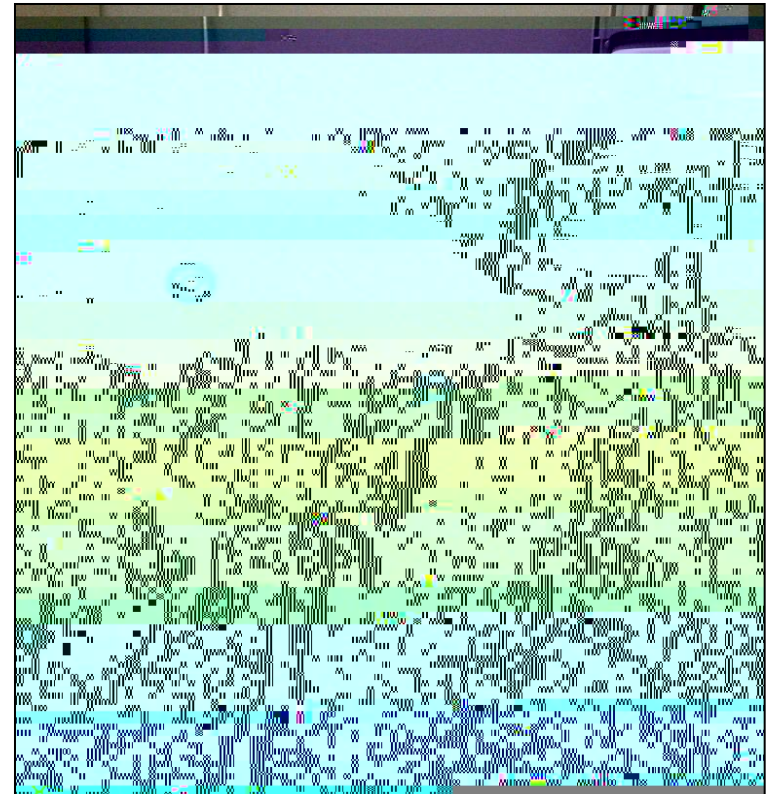 

Misfeed areas in Finisher **SR3140**



# Misfeeds - Finisher



Section R (1000-sheet finisher + Booklets)

Misfeed areas in Finisher **SR3150**



 





# Misfeeds – Document Feeder




Section P

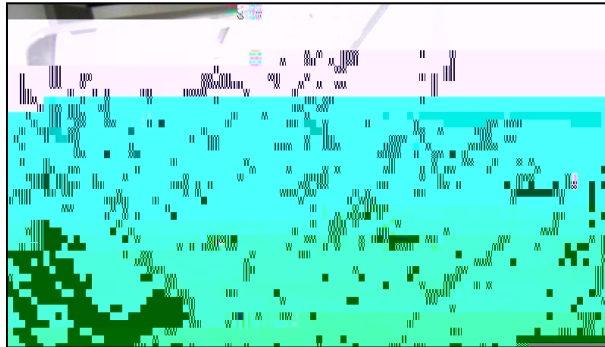

 C4504-6004 : Push the grey latch to access the paper from the inside

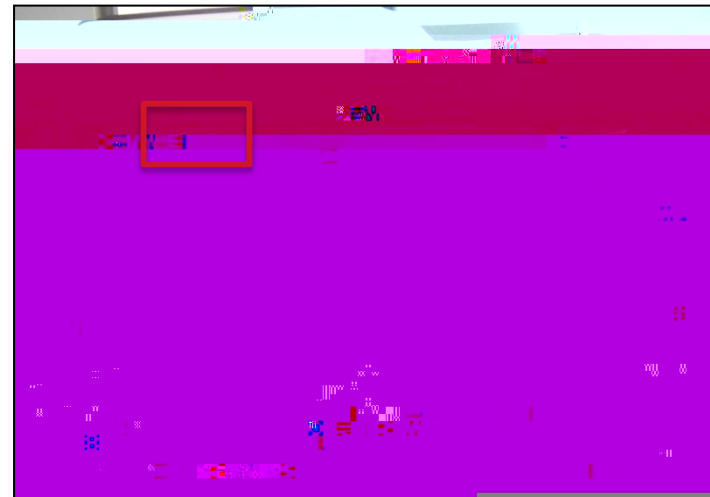

# Maintenance – Document Feeder

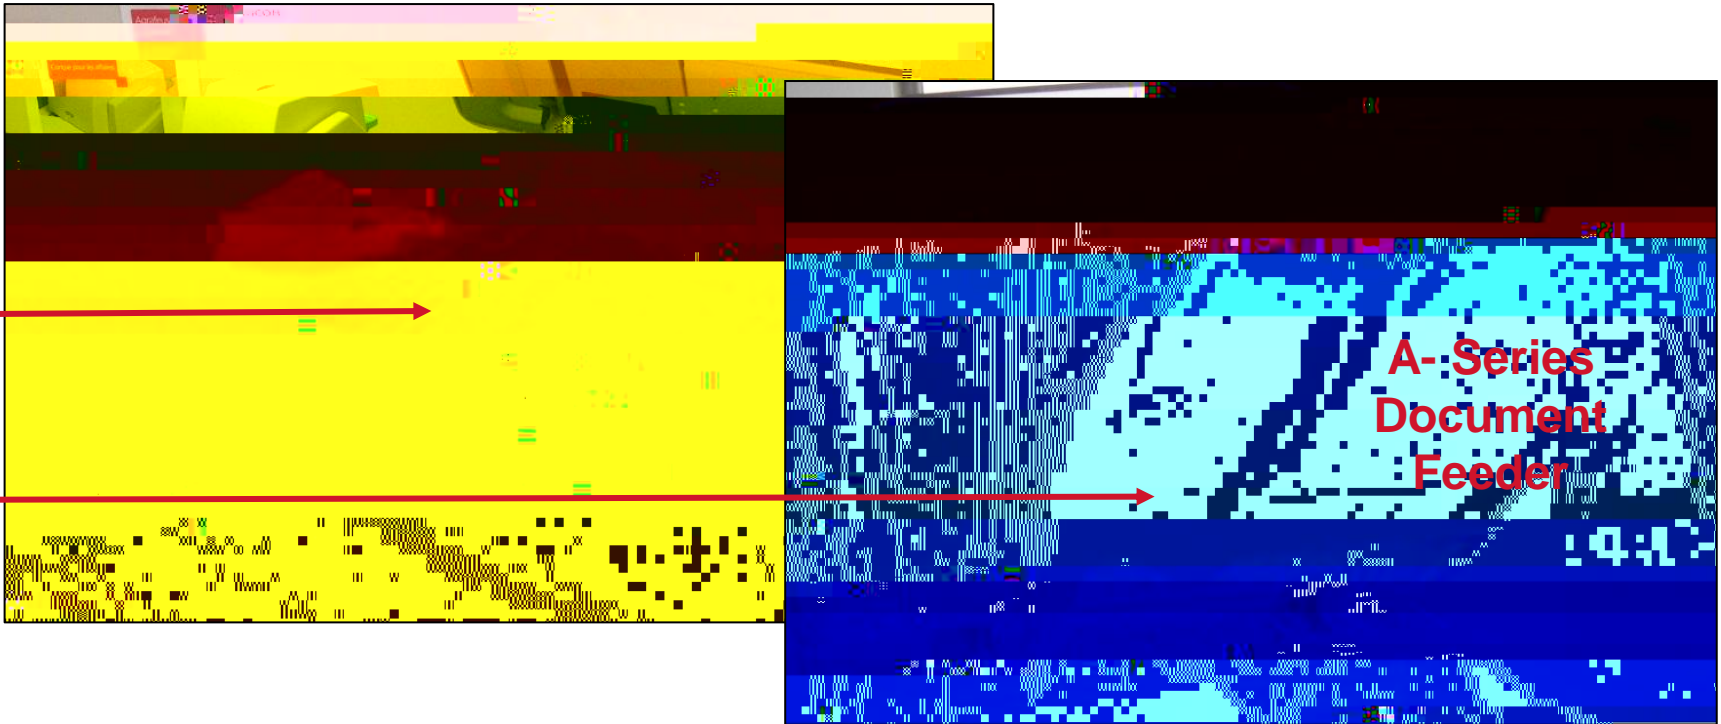 


Cleaning the glass: a cloth is supplied with your unit


Please clean the scan glass and exposure glass frequently, or when you notice lines or spots on your copies



# Document Feeder

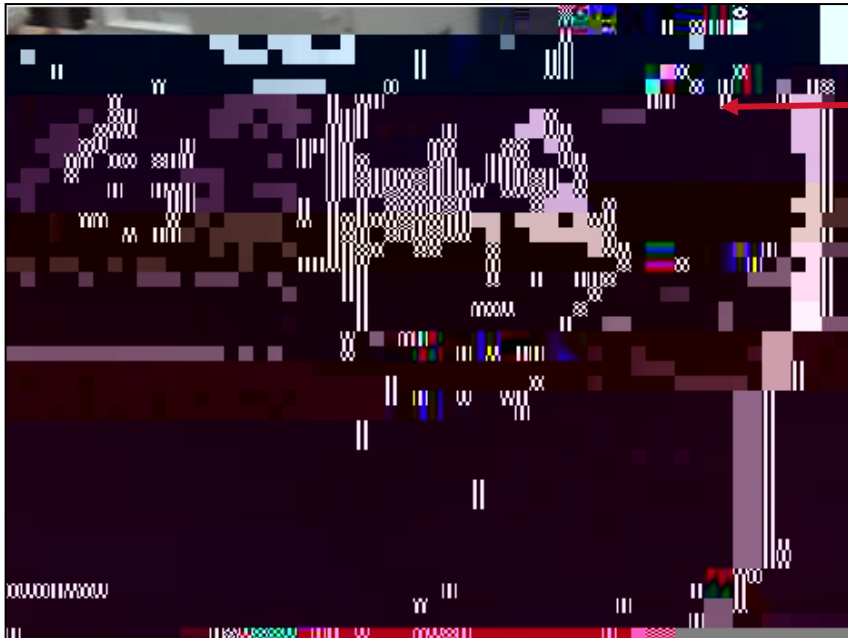 


 The 3 sensors on the feed table should not be blocked by paper, etc. It will result in undesired paper size output, or the unit will keep indicating to load special paper size in the tray

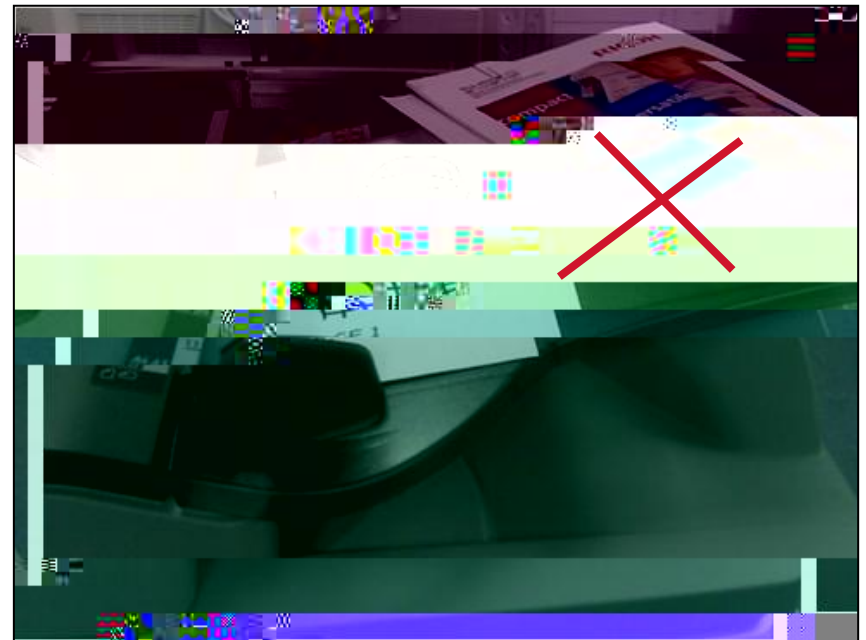

Document Feeder Sensors



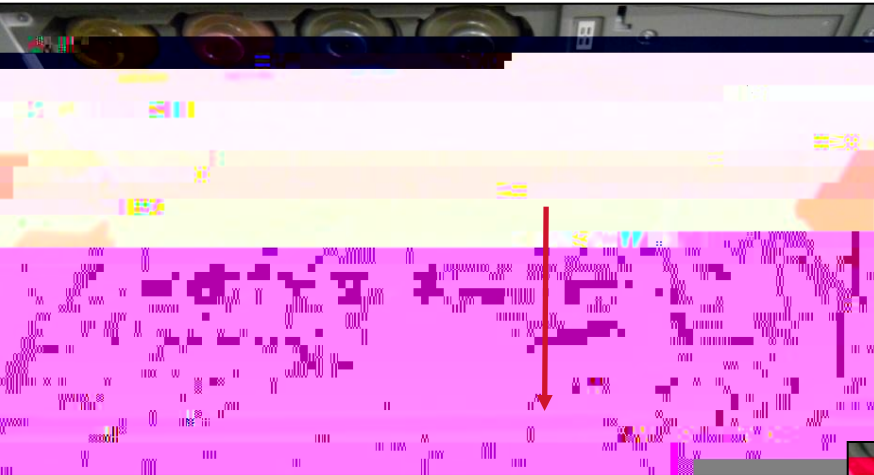 

Remove the blue cleaning wand from its slot in the front panel

At an angle, slide it in and out, a few times, in each of the 4 color slots. This should be done every 2 months, to prevent dust build-up on the slit glass, which causes the laser to





